

# BATTISTINIS CUSTOM CYCLES

1109 LANGTON DRIVE  
SAN RAMON, CA 94582  
925.270.4211 TECH LINE  
WWW.BATTISTINISUSA.COM

## CHROME BILLET & BLACK ANODIZED BRAKE LEVERS FOR SOFTAIL MODELS



**MEDIUM:**  
30 minutes  
to install  
(approx.)




**MAINTENANCE:** To keep your new brake lever looking its best, apply a high-quality chrome polish to it every time you detail your motorcycle.

### BILL OF MATERIALS


Quantity	Part
1	Brake lever, chrome or black anodized
1	Cotter pin
1	Brake lever peg chrome or black anodized
1	Hat spacer
1	$\frac{5}{16}$ "-24 x 1 $\frac{3}{4}$ " flat head cap screw, chrome
2	$\frac{5}{16}$ " shim washer

**WARNING:** Your safety depends on the correct installation of this kit. Use appropriate service manual procedures. If the procedures are not within your capability or you do not have the correct tools, have a trained mechanic/technician install this part for you. Improper installation of this part could result in injury or death.

**STEP 1:** Following the specifications listed in the appropriate service manual for your year and model of motorcycle, remove the existing brake lever. Clean the pivot shaft and remove o-ring as shown in the inset photo (arrow). **NOTE:** the brake lever peg is included in this kit but is not installed to the brake lever. This is done to allow ample clearance between the lever and highway bars during installation of the lever.

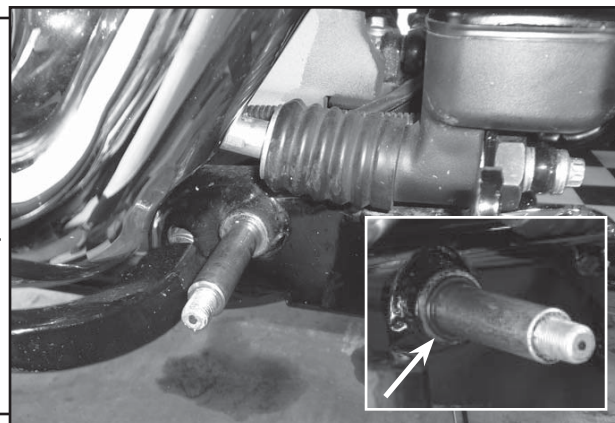

**STEP 2:** To ensure proper alignment of the brake lever and the master cylinder pushrod, place the steel spacer (inset) over the pivot shaft with the chamfer facing INWARDS. The o-ring removed in STEP 1 can now be replaced as shown in the main photo (arrow)

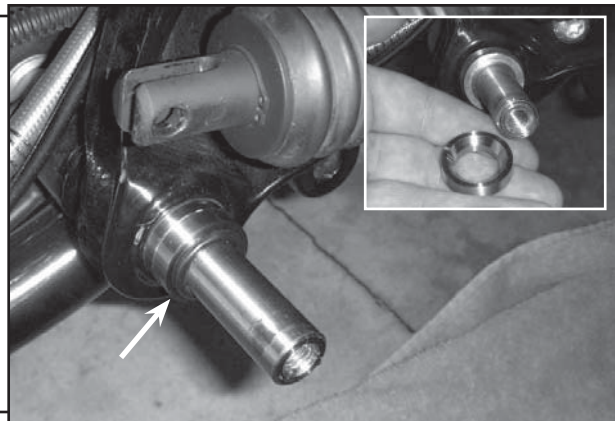




## BATTISTINIS CUSTOM CYCLES

### CHROME BILLET & BLACK ANODIZED BRAKE LEVERS FOR SOFTAIL MODELS

**STEP 3:** Now install your new Battistinis brake lever, then the included hat spacer (inset). Use a drop of Loctite Blue 242 on the threads of the  $\frac{5}{16}$  -24 x  $1\frac{3}{4}$ " flat head cap screw new supplied with this kit. **NOTE:** As manufacturing tolerances vary from motorcycle to motorcycle, shim washers have been included to ensure proper alignment and end float of your new Battistinis brake lever. Install your new Battistinis brake lever following the specifications listed in the appropriate service manual for your year and model of motorcycle.

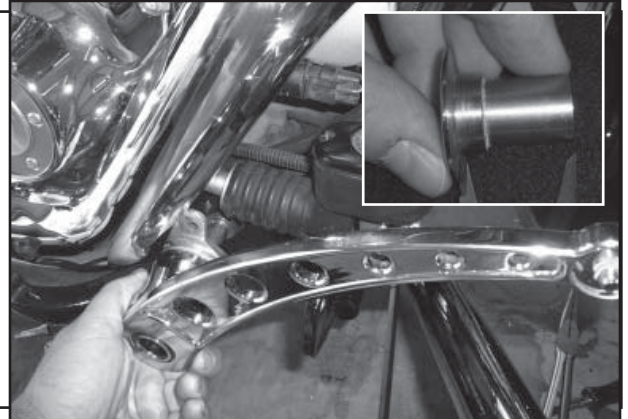

**STEP 4:** The finished installation should look like this. (Battistinis footpegs sold separately). Test for proper function of the rear brake prior to test riding your motorcycle.

