




BATTISTINIS CUSTOM CYCLES


1109 LANGTON DRIVE
SAN RAMON, CA 94582
925.270.4211 TECH LINE
WWW.BATTISTINISUSA.COM

CHROME BILLET GRIPS & BLACK ANODIZED BILLET GRIPS FOR 2008 - UP MODELS

BILL OF MATERIALS


Quantity	Part
1	Billet grip, left, chrome or black anodized
1	Billet grip, right, chrome or black anodized
3	Set screw, stainless steel, 10-32 x $\frac{3}{16}$ "

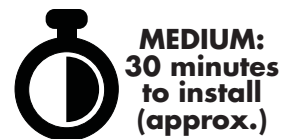

 **MAINTENANCE:** To keep your new grips looking their best, apply a high-quality chrome polish to them (for chrome grips) or clean them thoroughly (for black grips) every time you detail your motorcycle.

WARNING: Your safety depends on the correct installation of this kit. Use appropriate service manual procedures. If the procedures are not within your capability or you do not have the correct tools, have a trained mechanic/technician install this part for you. Improper installation of this part could result in injury or death.

STEP 1: Follow the procedure listed in the appropriate service manual for your year and model of motorcycle to remove the existing right-side grip. Next, slide the new Battistinis grip over the handlebar until it indexes over the sensor as shown and complete the installation according to the appropriate service manual for your year and model of motorcycle.

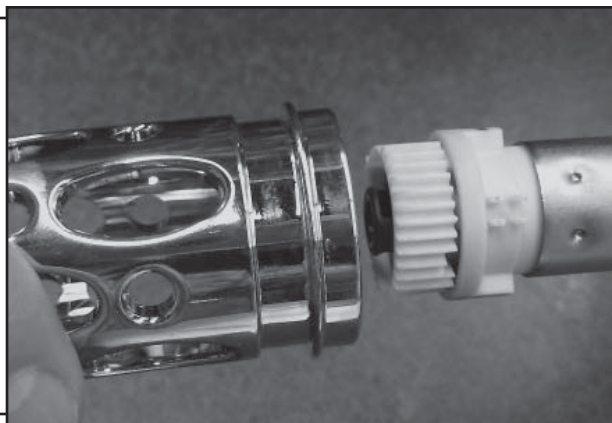

STEP 2: Remove the existing left-side grip and clean the handlebar end if necessary. The new grip is held in place with three stainless steel set screws. Use a drop of blue Loctite 242 on either the set screw threads or in each of the threaded holes in the grip. Slide the grip up the handlebar and position it to your preference. Tighten each of the three set screws a little at a time to ensure that they are all tightened uniformly, as shown. We recommend re-checking the set screws periodically to ensure they stay tight. Now you are ready to enjoy your new Battistinis billet grips.

